


DESK MODESTY SCREEN INSTALLATION GUIDE

FRONT SCREEN DESK MODESTY

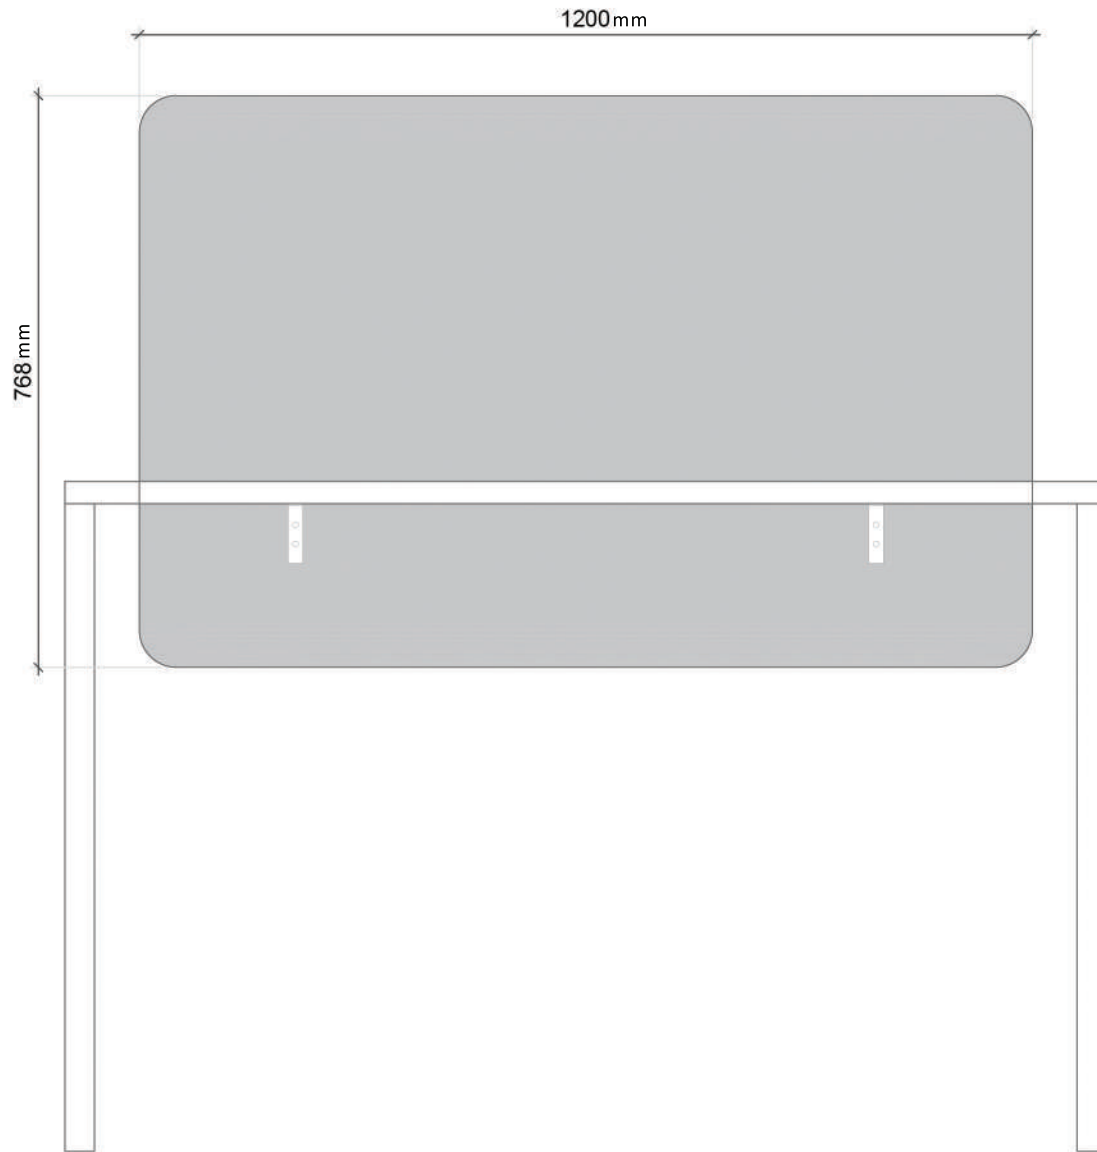

ACCESSORIES DETAIL

1. 18mm THK. Acoustic Panel
(1 set)



2. L-Bracket
(2 sets)



3. Flat Head Self Tapping Screws
(8 pcs)




ASSEMBLY METHOD


1. Mark out fixing point on the DESK DIVIDER PANEL and workdesk top



2. Screw the L-BRACKET into the bottom of the workdesk top with the screw

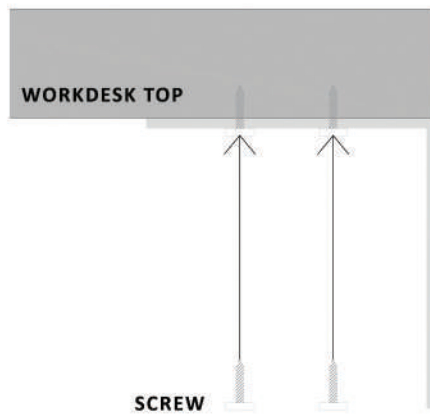


3. Align the DESK DIVIDER PANEL to the workdesk and L-BRACKET. Once align, screw the L-BRACKET with the DESK DIVIDER PANEL together

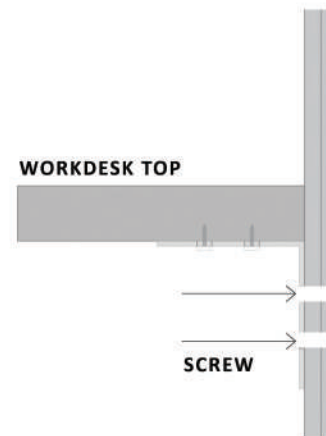

DESK MODESTY SCREEN INSTALLATION GUIDE

FRONT SCREEN DESK MODESTY

EXPLODED VIEW

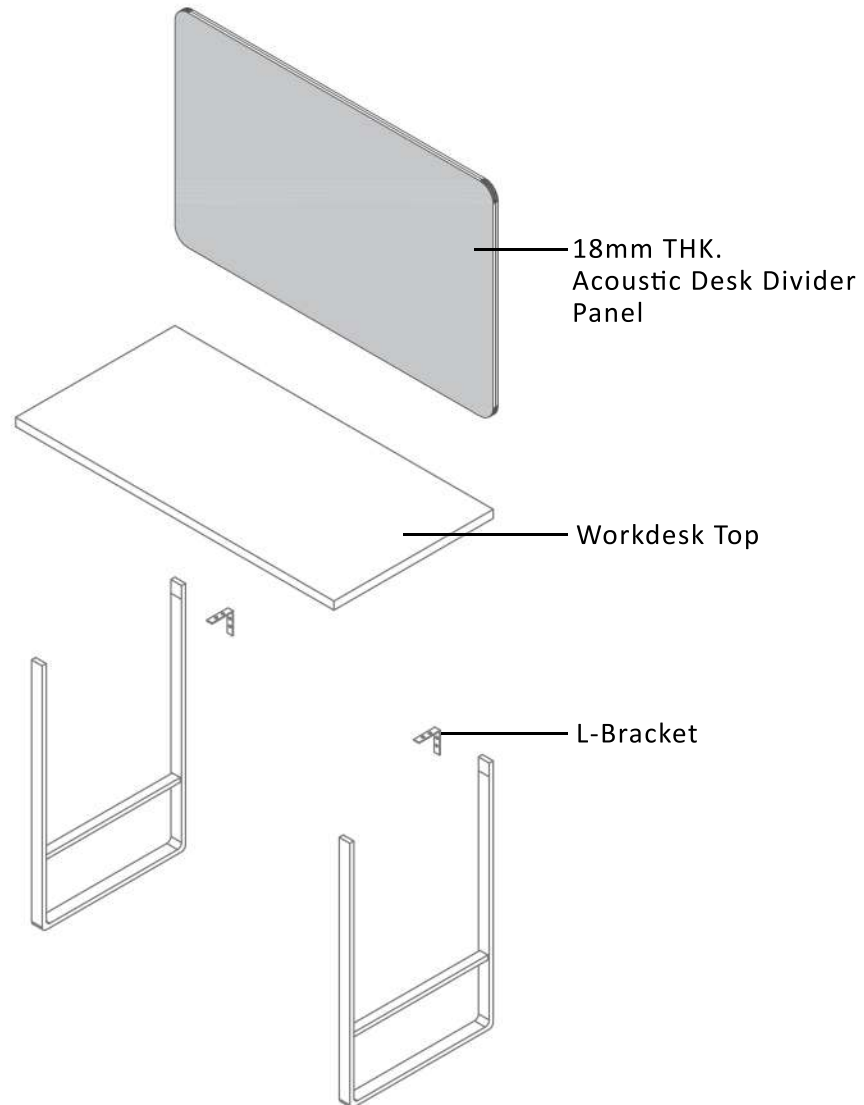

AXONOMETRIC VIEW

