

ACOUSTIC PENDANT LIGHT INSTALLATION GUIDE


- DOME



ACCESSORIES DETAIL

1. Fittings







Top cover + screw & nut

Bracket holder + screw & nut

Hook







Lamp cover

2. Optional for plastered ceiling; to use reinforcement on top of the ceiling



Spring toggle




Plywood Strip (9 – 15mm thk)




INSTALLATION METHOD


1. Drill two holes on the ceiling based on the desired position. Fasten two expansion screws to the ceiling.

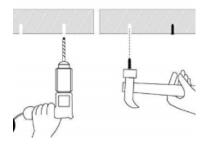

3. Screw the top cover with fittings provided.




5. Fix the ceiling base plate to hanging panel using two nuts provided.

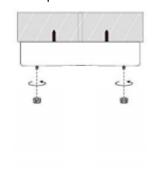


7. Insert the lamp cover followed by the bulb and finish it by attaching the laser cut cover



2. Attach two flat-head screw on the mounting bracket and fix the mounting bracket to surface using two tapping screw provided.

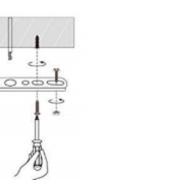

4. Connect the earth wire and power cable using the terminal blocks.

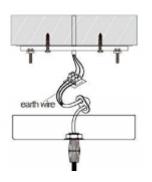

6. Screw the hook on top cover and insertThe electrical wire



7. Tips; standard height to hang the pendant light

Bet	nimum ween dants	30"-36" Minimum Clearance	,
			Standard Island Height is
			36"

PΙ