


EZ SCREEN INSTALLATION GUIDE

- SUSPENDED TOP & SUSPENDED BASE

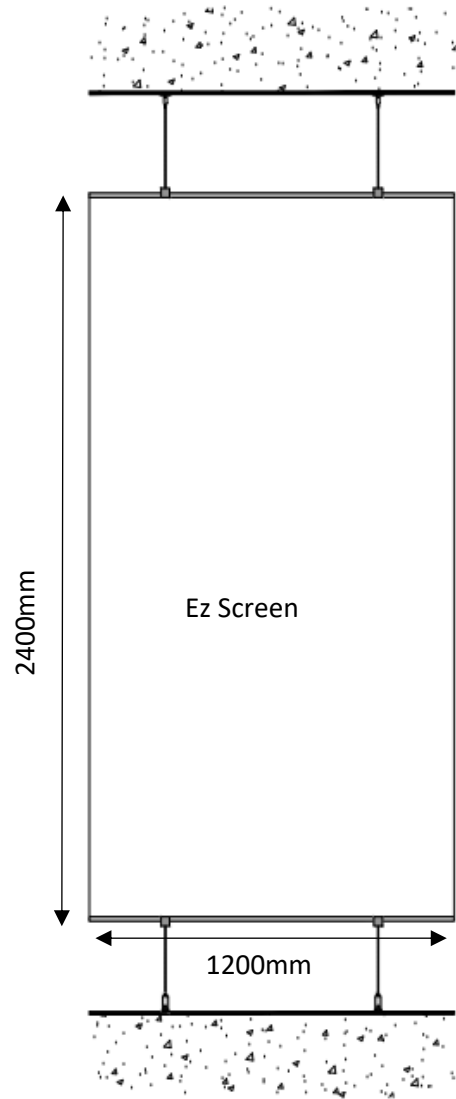

ACCESSORIES DETAIL

1. Disc Code Screw Anchor with Wire Rope and Clamp (4 sets)



2. U-Channel (2 pcs x 1200mm Length)




3. Screws (12pcs)




INSTALLATION METHOD

1. Mark out fixing points for each screen

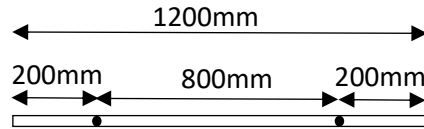


2. Screw Disc Code Screw Anchor to the ceiling along with wire rope. Repeat for the other suspension kit.


(*do not install into plasterboard/ drywall unless with plywood reinforcement)

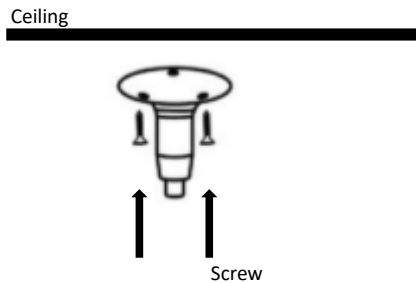


3. Gently squeeze the u-channel that is holding the screen along its length

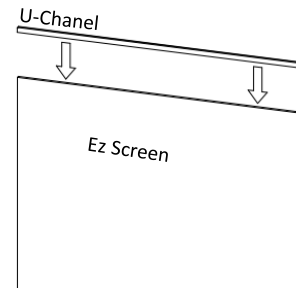


4. Connect the clamp with the wire rope attach to Disc Code screw anchor. Adjust the preferred height of the Alfa Ez Screen

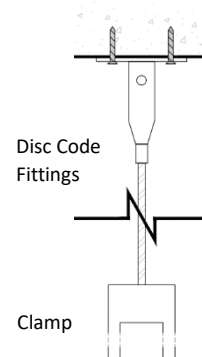


5. Attach the screen with u-channel to the clamp and make sure they are perpendicular. Once it attached, tighten the screw onto the clamp to hold the screen

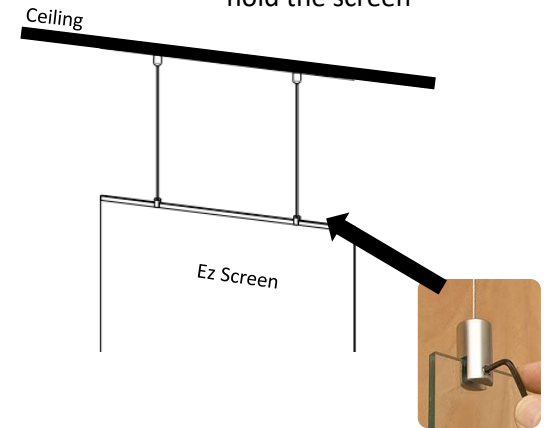

6. Screw the bottom fittings and attach the clamp to u-channel. Tighten the wire rope until the screen is fixed and secured

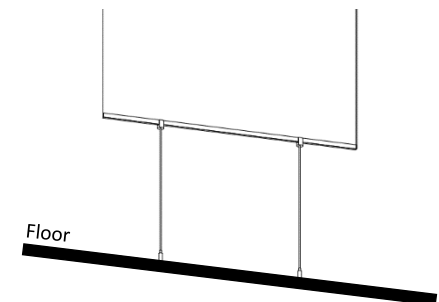

EXPLODED VIEW

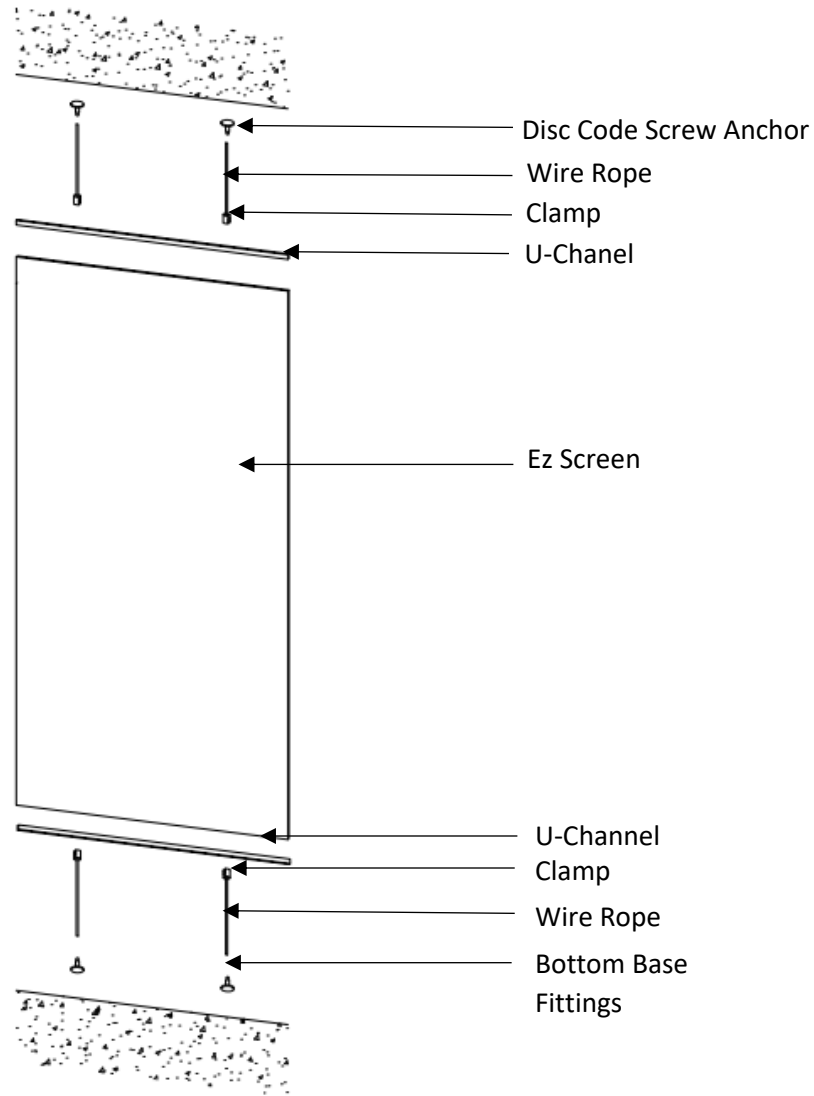

SECTION CROSS VIEW

